



- 1. This schematic is for guidance only and should not be used for installation
- 2. Maximum distance from door entry panel to control equipment is 100m using Cat5e cable
- 3. Maximum distance from control equipment to the monitor is 125m using Cat5e cable
- 4. Spare cores in Cat5e cable must not be used for other services -

2Voice LINE


5. Add a cable for the electric release or maglock -

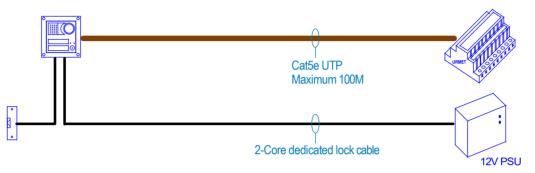


6. Add a cable if there is a keypad in the panel -

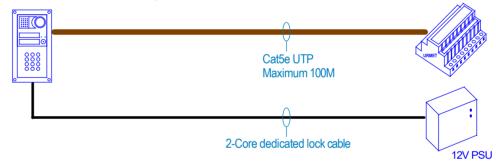


7. Add a second Cat5 cable if there is an Urmet/FDI access control reader fitted in the panel -

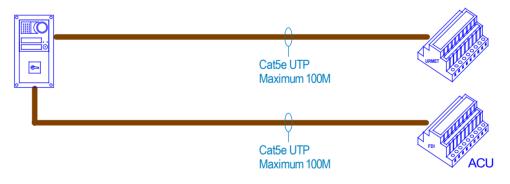

8. Cabling for double pole push to exit switch, double pole break glass unit and maglock -

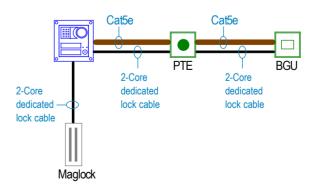

9. Up to four monitors can be connected to ring together -

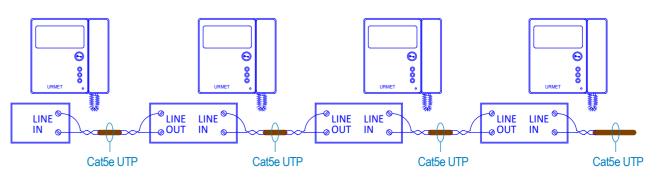

urmet



